


MT1840



TECHNICAL DATA SHEET




A side-view diagram of a red tractor with a front loader. The tractor is positioned on a horizontal line representing the ground. Five dimensions are indicated with arrows and numbers: 1 is the width of the front loader's base; 2 is the wheelbase (distance between the two wheels); 3 is the distance from the rear wheel to the back of the tractor body; 4 is the total length of the tractor; and 5 is the height of the tractor's body from the ground.

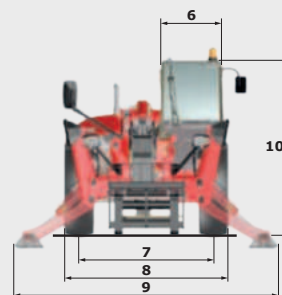


Rough terrain load chart standard EN1459 B


Machine on tyres with forks

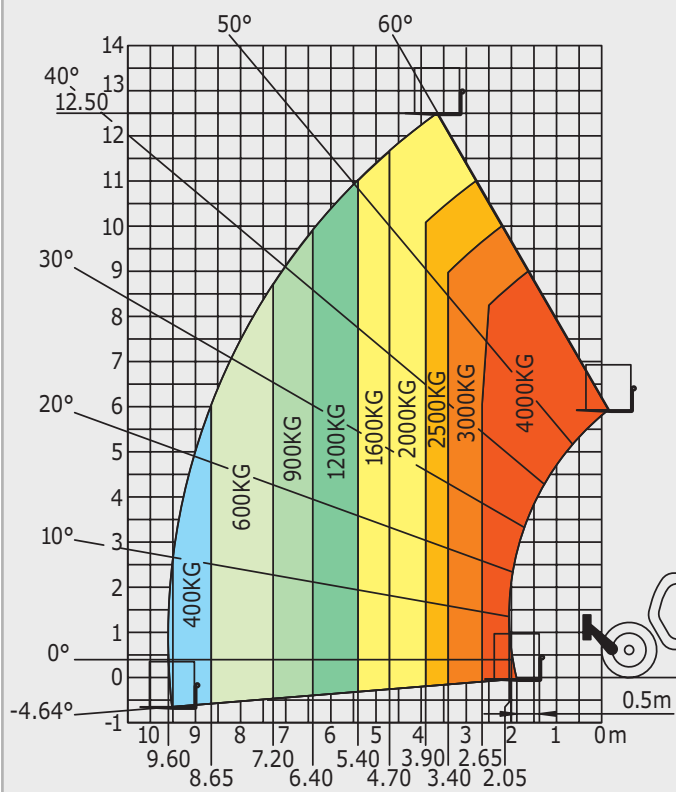

Machine on stabilizers with forks

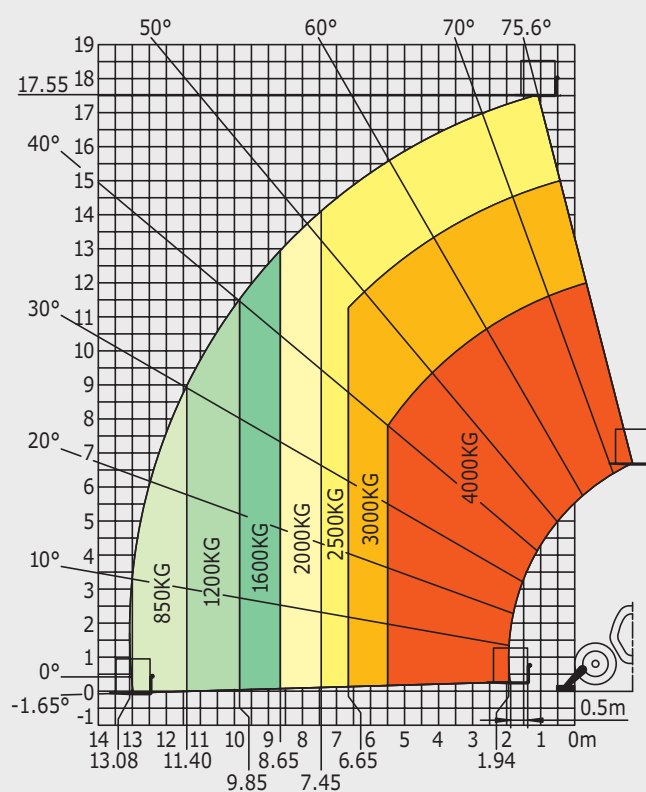

Machine on stabilizers with platform (MT 1840 A and MT 1840 HA versions)

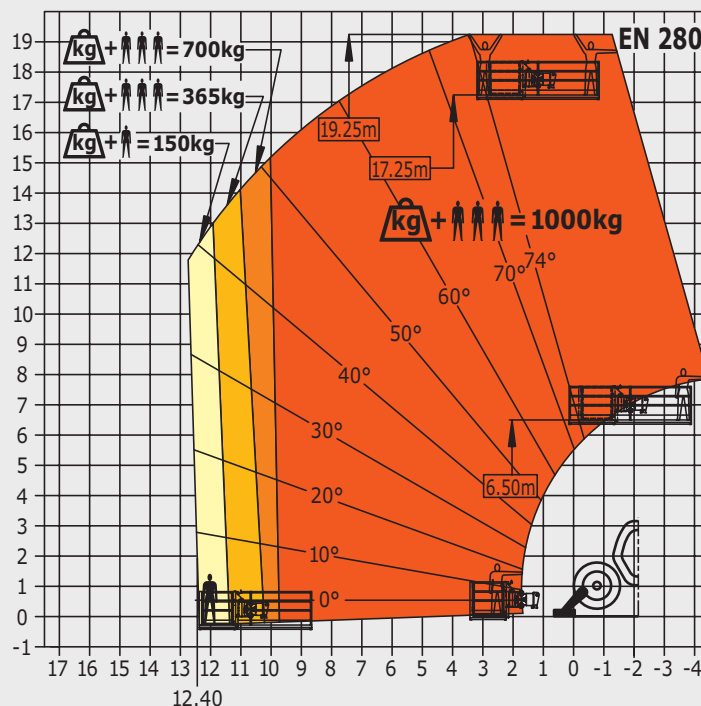

Your nearest **MANITOU** dealer:



Head office:
B.P. 249 - 430 rue de l'Aubinière - 44158 Ancenis Cedex - France
Tel: 00 33 (0)2 40 09 10 11 - Fax: 00 33 (0)2 40 09 10 97
www.manitou.com